


## Free-Weel Configuration for towing



### **WARNING**

the machine's brakes can be released manually for towing.  
Before starting the manual brake release procedure, make sure all cables are disconnected between ship and vehicle . Also between vehicle and shore current contacts.

- Secure the machine by blocking all wheels. When the brakes are released, the vehicle will be free to move.
- Release the brakes by unscrewing all four switch off caps in the wheel hubs. Turn them over and screw them in so that they press in the free wheel valve
- Follow the opposite procedure to reconnect the brakes.
- The freewheel valve should always be closed.

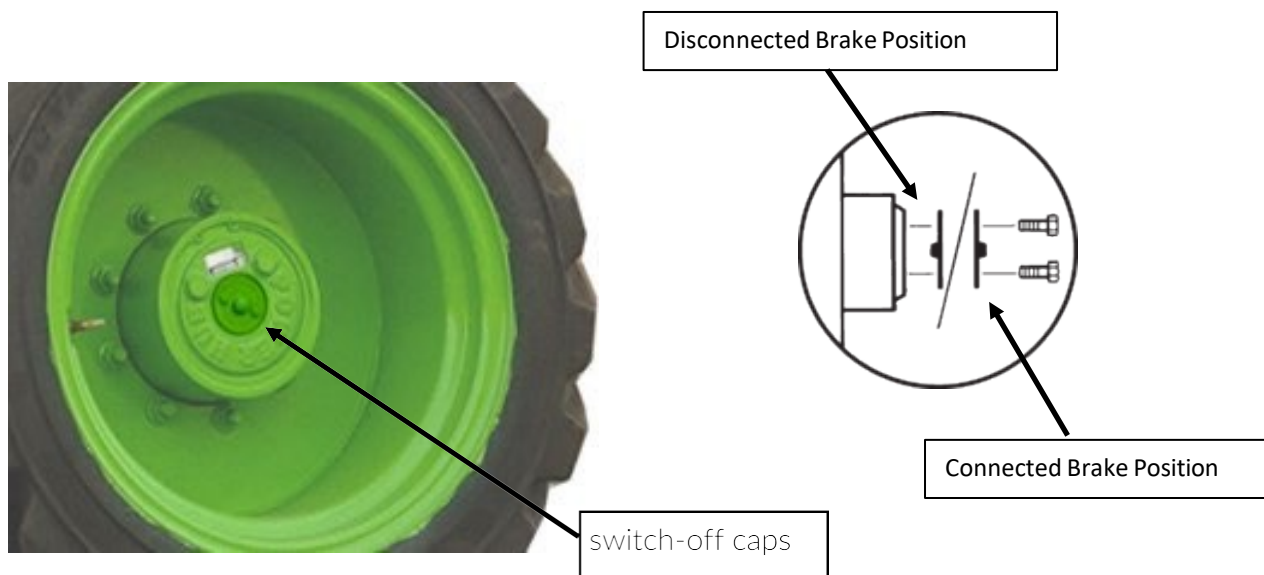

Steering the wheels when the vehicle is towed

- Set key to platform control
- Pull out the emergency stop
- Stand on the foot pedal
- Press and hold emergency toggle switch (pos 8)
- Use the buttons on top of the joystick for driving (pos 12) to steer the wheels

### **DANGER**

When the brakes are released, the vehicle is free to roll.

### **NOTICE**

The machine can also be towed using a forklift truck.  
if a towing hook is mounted at the back of the machine.

