

# Unpacking Hybeko Shore Power Machine

Machine with s.nr: SP45E-30004



Fuses have been removed for transport. These are located under the lid, see picture

When unpacking the machine, Fuses must be put back to slots 1 and 2

Fuses 1 (10A) are for the distance warning system

Fuses 2 (10A) are for charging the 12V battery

in normal mode fuses should be in slots 1 and 2



In transport mode, fuses are placed in the two free slots

